

Recommended printer settings

	Epson					Canon					HP
	Printer	SP 2100 / 4000 / 7500 / 9600	SP 2400 / 3800 / 4800 / 7800 / 9800	SP 3880 / 7880 / 9880 / 11880 / 7890 / 9890 / R 2880 / R 3000	SP 4900 / 7900 / 9900	SP R800 / 1800 / R1900	SP 1500 W	iPF 5000 / 8000 / 9000 / 5100 / 6100 / 8100 / 9100 / 6200 / 8200 Pigma Pro 9500	iPF 6300 / 8300	Pigma Pro 9000 (Dye)	Photosmart B9180 / 88850 / DJ 2100 / DJ 3100 / DJ 3200 / DJ 5200 / DJ 6100 / DJ 6200
	Ink	Ultrachrome	Ultrachrome K3	Ultrachrome K3 Vivid Magenta	Ultrachrome HDR	Ultrachrome High-Gloss / 2	Claria (Dye)	Lucia	Lucia EX	Dye	Vivera
	Mediatype	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	HW Gloss Photo Paper	HW Gloss Photo Paper	Photo Paper Plus Glossy	HP Advanced Photo Paper Glossy
	Setting	Photo	Photo	Photo	Photo	Best Photo	Photo	Highest	Highest	High	Best
	Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	PK
	Mediatype	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	Premium Glossy Photo Paper	HW Gloss Photo Paper	HW Gloss Photo Paper	Photo Paper Plus Glossy	HP Advanced Photo Paper Glossy
	Setting	Photo	Photo	Photo	Photo	Best Photo	Photo	Highest	Highest	High	Best
	Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	PK
	Mediatype	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	HW Satin Photo Paper	HW Satin Photo Paper	Photo Paper Plus Semigloss	HP Professional Photopaper Semimatt
	Setting	Best Photo	Best Photo	Best Photo	Best Photo	Best Photo	Best Photo	Highest	Highest	High	Best
	Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	PK
	Mediatype	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Luster Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	HW Satin Photo Paper	HW Satin Photo Paper	Photo Paper Plus Semigloss	HP Professional Photopaper Semimatt
	Setting	Best Photo	Best Photo	Best Photo	Best Photo	Best Photo	Best Photo	Highest	Highest	High	Best
	Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	PK
	Mediatype	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	Premium Semigloss Photo Paper	HW Semigloss Photo Paper	HW Semigloss Photo Paper	Photo Paper Plus Semigloss	HP Advanced Photo Paper Glossy
	Setting	Photo	Photo	Photo	Photo	Best Photo	Best Photo	Highest	Highest	High	Best
	Black Ink	PK	PK	PK	PK	PK	-	PK	PK	-	PK
	Mediatype	Archival Matte Paper	Archival Matte Paper	Archival Matte Paper	Archival Matte Paper	Epson Archival Matte Paper	Epson Archival Matte Paper	Photopaper matte	Photopaper matte	Professional Photo Paper	Canvas
	Setting	Photo	Photo	Photo	Photo	Photo	Photo	High	High	High	Best
	Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	MK
	Mediatype	Watercolor Paper	Watercolor Paper	Watercolor Paper	Watercolor Paper	Epson Archival Matte Paper	Epson Archival Matte Paper	Photopaper matte	Photopaper matte	Fine Art Photo Rag	Other FineArt Paper
	Setting	Photo	Photo	Photo	Photo	Photo	Photo	High	High	High	Best
	Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	MK
	Mediatype	Watercolor Paper	Watercolor Paper	Watercolor Paper	Watercolor Paper	Epson Archival Matte Paper	Epson Archival Matte Paper	Photopaper matte	Photopaper matte	Fine Art Photo Rag	Other FineArt Paper
	Setting	Photo	Photo	Photo	Photo	Photo	Photo	High	High	High	Best
	Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	MK
	Mediatype	Watercolor Paper	Watercolor Paper	Watercolor Paper	Watercolor Paper	Epson Archival Matte Paper	Epson Archival Matte Paper	Photopaper matte	Photopaper matte	Fine Art Photo Rag	Other FineArt Paper
	Setting	Photo	Photo	Photo	Photo	Photo	Photo	High	High	High	Best
	Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	MK
	Mediatype	Watercolor Paper	Watercolor Paper	Watercolor Paper	Watercolor Paper	Epson Archival Matte Paper	Epson Archival Matte Paper	Photopaper matte	Photopaper matte	Fine Art Photo Rag	Other FineArt Paper
	Setting	Photo	Photo	Photo	Photo	Photo	Photo	High	High	High	Best
	Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	MK
	Mediatype	Watercolor Paper	Watercolor Paper	Watercolor Paper	Watercolor Paper	Epson Archival Matte Paper	Epson Archival Matte Paper	Photopaper matte	Photopaper matte	Fine Art Photo Rag	Other FineArt Paper
	Setting	Photo	Photo	Photo	Photo	Photo	Photo	High	High	High	Best
	Black Ink	MK	MK	MK	MK	MK	-	MK	MK	-	MK

PK = Photo Black, MK = Matt Black
Please Note: Settings are only for original printer drivers. If you use our RGB+IC-Profiles, the settings may be different. Please refer to profile recommendations.

